

35 MacDonald Ave, Dartmouth, NS, B3B 1C6 Tel: 902 468 6696 Toll Free NS: 1 800 971 3888

Fax: 902 468 8843

Web: www.constructionsafetyns.ca

Safe Job Procedure for Circular Saw Use

1. Pre-operation check/inspection

- Wear appropriate personal protective equipment.
- Disconnect the power cord from the electrical outlet before inspecting, adjusting, cleaning or repairing the saw or changing blades.
- Inspect the saw and power cord for damage prior to each use.
- Ensure the blade is sharp.
- Ensure the blade is the correct type for the material to be cut.
- Ensure the blade is securely mounted.
- Ensure the blade is in good condition; no nicks or cracks.
- Ensure the retracting lower blade guard is working freely.
- Check the blade for proper blade rotation.
- Check the material for any defects such as warps or knots and foreign objects such as nails, staples or screws.
- Adjust the blade depth to no more than ½ inch (1.3 cm) beyond the lower face of the material.

2. Operation

- Secure and adequately support the material to be cut.
- To rip material use a guide that is clamped or nailed to the material.
- Be aware of sawdust and debris from cutting the material.
- Keep all electrical cords clear of the cutting area.
- Ensure an adequate length of cord is available to fully complete the cut.
- Use both hands to operate the saw; one on the trigger handle and the other on the front knob.
- Keep your body to the left side of the blade; never in line with the saw blade just in case
 of a kickback.
- The weight of the saw must always be on the clamped side of the stock.
- Start the saw with the shoe in contact with the stock, but the blade clear of the stock.
- Allow the saw to attain full power before cutting.
- Always cut in a straight line.
- Allow off-cuts to fall.



35 MacDonald Ave, Dartmouth, NS, B3B 1C6 Tel: 902 468 6696 Toll Free NS: 1 800 971 3888

Fax: 902 468 8843

Web: www.constructionsafetyns.ca

- If the blade binds or when interrupting a cut, release the trigger and hold the saw motionless until the blade comes to a complete stop.
- Keep the guard free from an accumulation of sawdust and chips.
- Ensure the retracting lower blade guard is fully returned and the blade has fully stopped before setting the saw down.
- Disconnect the power cord before adjusting or changing the blade or performing regular maintenance.